


Installation Basics


- The OQSx sensor must be configured to the oil being measured prior to the installation (upfront oil profiling is essential).
- The OQSx sensor must be installed horizontally or no further than 45° to horizontal.
- The OQSx sensor must be installed in a live zone of oil (flow/immersed).
- Possibility of air entrapment should always be avoided.
- For applications where installation ports are not available, manifold can be provided.

ORIENTATION

Ideally horizontal, no more than +45° or less than -45°

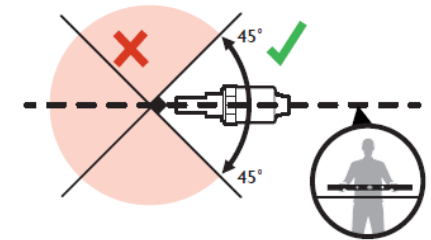

IMMERSION

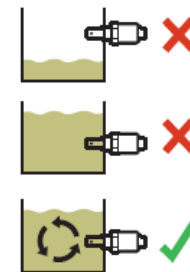

LOCATION OPTIONS

